


IMPORTANT NOTICE!



I.P. Series

Adjustable Hitch by TRIMAX

Tow Ball Assembly Guide

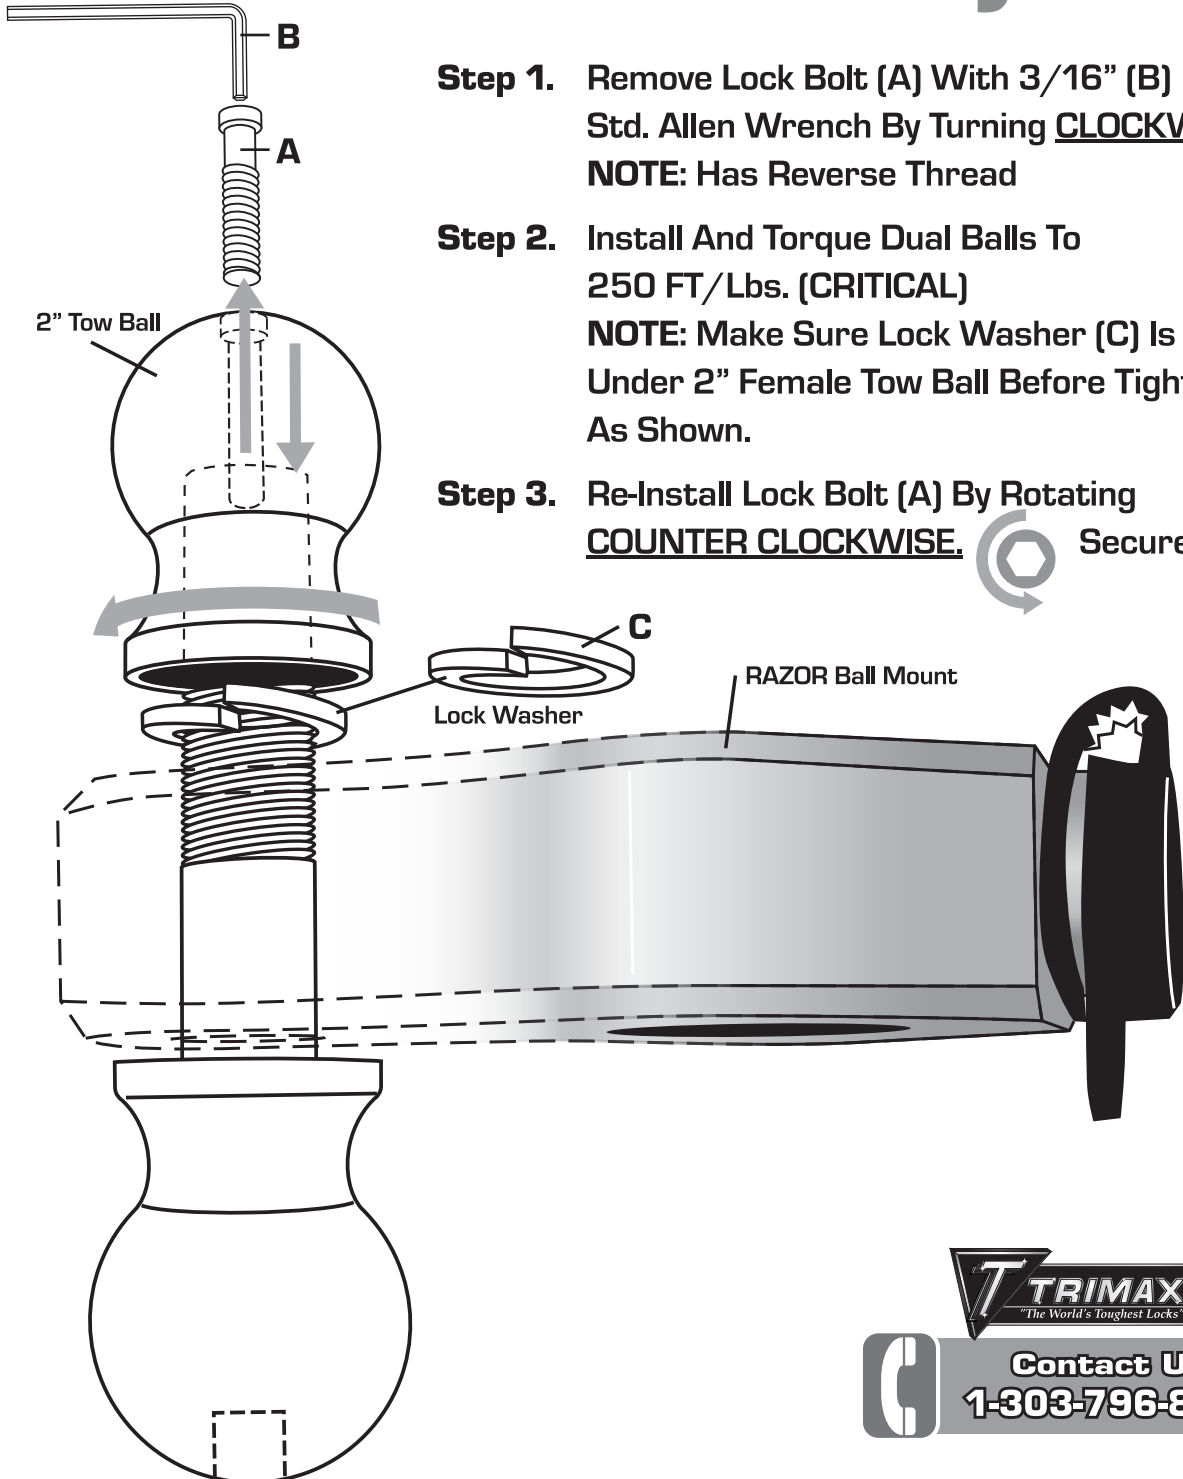

Step 1. Remove Lock Bolt (A) With 3/16" (B) Std. Allen Wrench By Turning CLOCKWISE. 
NOTE: Has Reverse Thread

Step 2. Install And Torque Dual Balls To 250 FT/Lbs. (CRITICAL)
NOTE: Make Sure Lock Washer (C) Is Installed Under 2" Female Tow Ball Before Tightening As Shown.

Step 3. Re-Install Lock Bolt (A) By Rotating COUNTER CLOCKWISE.  Secure Tightly!



 **Contact Us:**
1-303-796-8500